

Garden Seeder Row Marker Instructions


The Row Marker is an optional accessory used to mark a line in the soil parallel to the row you are currently planting. The Garden Seeder is later guided directly over that line, providing equal spacing between rows.

Parts:


1 – Row Marker Assembly

Attach the Row Marker

Insert the attaching end (the end with pins, not holes) of the Row Marker down into the center of the slot on the back of the frame of the Garden Seeder. The attaching end of the Row Marker has two pins, one shorter than the other. The Row Marker should slide easily across the groove on the back frame of the Garden Seeder.

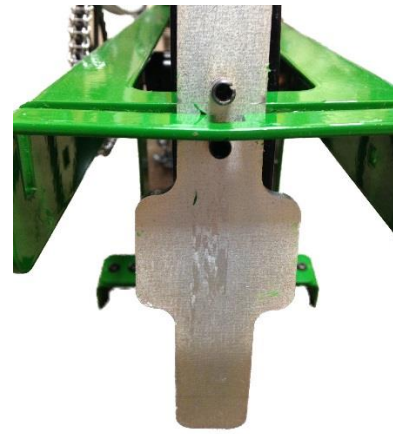

While leaving the attaching end in the center of the Garden Seeder frame, pull the marking end of the Row Marker around the wooden handle of the Garden Seeder so that it folds down to either side. When switching sides, move the attaching end back to the center of the Garden Seeder frame to easily pull the marking end around the handles of the Garden Seeder.

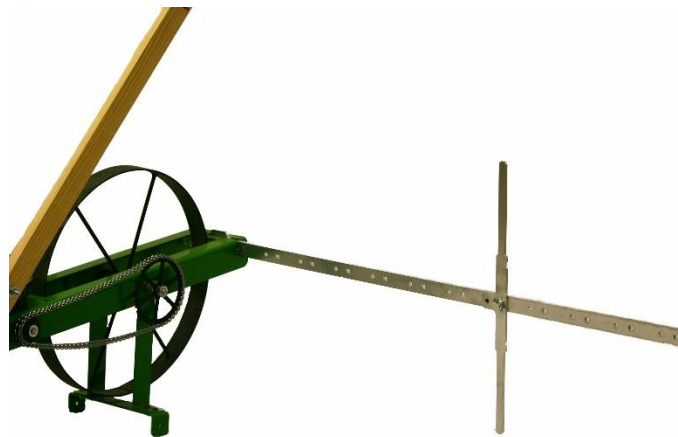

Using the Row Marker

First determine the distance you want between your next row of plants. The Garden Seeder Row Marker has holes that are 3" apart and range from 6" up to 3'.

To change the marking distance, remove the wing nut from the Row Marker blade to disconnect the blade from the arm. Insert the blade into the set of holes for the desired marking distance. The pin on the Row Marker blade fits in the round hole while the carriage bolt fits in the square hole.

Follow the steps shown in the picture below to simultaneously plant one row while marking the location of the next row.

