

# Plow Instructions

Included with Plow Set:

- Left (*L*) and Right (*R*) Plows
- 4 Attachment Bolts with Nuts



- Each Plow blade (left or right) contains a fixed bolt and a non-fixed bolt.
- The plow blades should be installed with the attachment arm on the underside of the Wheel Hoe toolbar.
- When installing the plow blades, the fixed bolt and the non-fixed bolt will be set in opposite directions. The fixed bolt should be facing upwards and the non-fixed bolt should be facing downward, so that the square, carriage portion of the non-fixed bolt sits snug inside the groove on the Wheel Hoe toolbar.
- Tighten each nut snugly with a 9/16" wrench.

To use the plows for hilling, arrange the blades as seen Figures 1 and 2. The Left Plow (*L*) blade throws soil to the left and the Right Plow (*R*) blade throws soil to the right. So for hilling, the Left Plow (*L*) should sit on the right and the Right Plow (*R*) blade should sit on the left.

To use the plows for furrowing, arrange the blades as seen in Figures 3 and 4. In this configuration, the Left Plow (*L*) blade will sit on the left and the Right Plow (*R*) blade will sit on the right.

To use a single plow blade, simply arrange a blade (left or right) on the outside of the tool bar as seen in Figures 5 and 6. It doesn't matter which single blade you use, as this will only dictate whether the row is on your left or right.

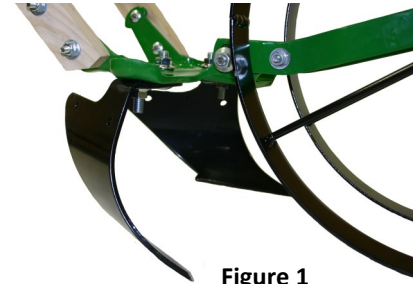


Figure 1

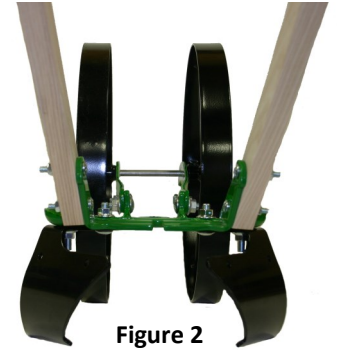


Figure 2



Figure 3



Figure 4



Figure 5



Figure 6